Universal Relays

RU Series



Full featured universal miniature relays. Designed with environment taken into consideration.










- See website for details on approvals and standards.
- Lloyd Register type approved.

Safety

The contact position can be confirmed through the five small windows

Using the latching lever, operation can be checked without energizing the coil. The latching lever is color coded for AC and DC coils.(AC coil: Orange DC coil: Green)

Non-polarized LED indicator available on plug-in relays.

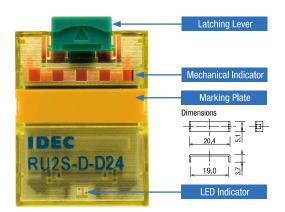

Reliable


No internal wires. Simple construction.

Easy-to-Use

Marking plate for easy identification of relays (Optional marking plates available in four other colors) Applicable for small loads to maximum contact currents. (See table below)

	RU2	RU4	RU42
Max, continuous current	10A	6A	3A
Min. applicable load	24V DC	1V DC	1V DC
(Note)	5mA	1mA	0.1mA

Note: Reference value.

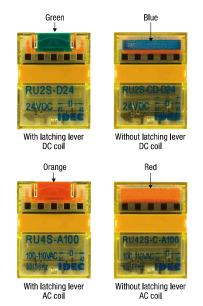

IDEC

RU Series Universal Relays

Single Contact

shape		Plug-in Terminal With Latching Lever Standard (DPDT)		PCB Terminal Without Latching Lever Standard (4PDT)		
Termination	Termination Latching Lever Style			rt No.	Coil Voltage Code *	
Tommaton	Latering Level	oty.o	DPDT	4PDT	oon voltage code *	
		Standard	RU2S-*	RU4S-*	A24, A100, A110, A200, A220 D6, D12, D24, D48, D100, D110	
	With Latching	With Latching	With RC (AC coil only)	RU2S-R-*	RU4S-R-*	A100, A110, A200, A220
	Lever	With diode (DC coil only)	RU2S-D-*	RU4S-D-*	D6, D12, D24, D48, D110	
Plug-in Terminal		With diode (DC coil only) Reverse polarity coil	RU2S-D1-*	RU4S-D1*	D24	
(*1)		Standard	RU2S-C-*	RU4S-C-*	A24, A100, A110, A200, A220 D6, D12, D24, D48, D100, D110	
	Without Latching	With RC (AC coil only)	RU2S-CR-*	RU4S-CR-*	A100, A110, A200, A220	
	Lever	With diode (DC coil only)	RU2S-CD-*	RU4S-CD-*	D6, D12, D24, D48, D110	
		With diode (DC coil only) Reverse polarity coil	RU2S-CD1-*	RU4S-CD1-*	D24	
PCB Terminal	Without Latching Lever	Simple (*2)	RU2V-NF-*	RU4V-NF-*	A24, A100, A110, A200, A220 D6, D12, D24, D48, D100, D110	

Bifurcated Contact

	shape		Plug-in 1 Standard	Terminal With Latching Lever	
Termination	Latching Lever	Style	Part No. 4PDT	Coil Voltage Code *	
		Standard	RU42S-*	A24, A100, A110, A200, A220 D6, D12, D24, D48, D100, D110	
	With Latching Lever	With RC (AC coil only)	RU42S-R-*	A100, A110, A200, A220	
		Lever	With diode (DC coil only)	RU42S-D-*	D6, D12, D24, D48, D100, D110
Plug-in Terminal		With diode (DC coil only) Reverse polarity coil	RU42S-D1-*	D24	
(*1)		Standard	RU42S-C-*	A24, A100, A110, A200, A220 D6, D12, D24, D48, D100, D110	
	Without Latching	With RC (AC coil only)	RU42S-CR-*	A100, A110, A200, A220	
	Lever	With diode (DC coil only)	RU42S-CD-*	D6, D12, D24, D48, D100, D110	
		With diode (DC coil only) Reverse polarity coil	RU42S-CD1-*	D24	
PCB Terminal	Without Latching Lever	Simple (*2)	RU42V-NF-*	A24, A100, A110, A200, A220 D6, D12, D24, D48, D100, D110	

Part No. Development

Specify a coil voltage code in place of \ast in the Part No.

Coil Voltage Code *	Coil Rating
24V AC	White
100-110V AC	Clear
110-120V AC	Blue
200-220V AC	Black
220-240V AC	Red
24V DC	Green
6V DC	
12V DC	
48V DC	Voltage marking on yellow tape
100V DC	on you w tapo
110V DC	

APEM

Switches &

Control Boxes

Emergency Stop Switches Enabling Switches

Safety Products

Explosion Proof

Terminal Blocks

Relays & Sockets

Circuit
Protectors

Power Supplies

LED Illumination

Controllers Operator

nterfaces

Sensors

AUTO-ID

Sockets

DIN Rail
Products

RU RV8H

RL

Accessory

Name	Part No.	Ordering No.	Color Code *	Package Quantity
Marking Plate	RU9Z-P*	RU9Z-P*PN10	A (orange), G (green), S (blue), W (white), Y (yellow)	10

Note: Specify a color code in place of the Part No. When ordering, specify the Ordering No.

The marking plate can be removed from the relay by inserting a flat screwdriver under the marking plate.

^{*1)} Plug-in terminal, except for simple types, have an LED indicator and a mechanical indicator as standard.

^{*2)} Simple types do not have an LED indicator, a mechanical indicator, and a latching lever.

APEM Switches & Pilot Lights Control Boxes Emergency Stop Switches Enabling Switches

Coil Ratings

Coil		Coil Rated Current (mA) ±15%		Coil Resistance (Ω) ±10%	Operating Characteristics (against rated values at 20°C)							
Rated Voltage (V)		Voltage Code	Voltage Code (at 20°C) Maximum Continuous		Minimum Pickup Dropout Voltage							
		Ů	50 Hz	60 Hz	Applied Voltage		Voltage	bropout voltago				
	24	A24	49.3	42.5	164							
	100-110	A100	9.2-11.0	7.8-9.0	3,460							
AC (50/60 Hz)	110-120	A110	8.4-10.0	7.1-8.2	1-8.2 4,550 110% 80% max	80% maximum 30%	30% minimum					
(00/00 112)	200-220 A	A200	4.6-5.5	4.0-4.6	14,080							
	220-240	A220	4.2-5.0	3.6-4.2	18,230							
	6	D6	1:	55	40							
	12 D12	8	0	160								
DC	24	D24	44	1.7	605	110%	000/ mayimum	10% minimum				
	48	D48	1	8	2,560	110%	80% maximum	10% minimum				
	100	D100	9	.7	10,000							
	110	D110	8	.9	12,100					2,100		

Rated Load

Electrical Life

(operations)

100,000 min.

500,000 min. 300,000 min.

100,000 min.

500,000 min.

300,000 min.

100,000 min.

50,000 min.

200,000 min.

50,000 min.

200,000 min.

50,000 min.

200,000 min.

100,000 min.

100,000 min.

100,000 min.

Ind.

5A

5A

2.5A

0.4A

2.6A

A8.0

2.7A

1.5A

0.33A

0.18A

0.8A

1.5A

0.22A

Safety Products

• The rated current includes the current draw by the LED indicator.

Allowable

Contact Power

2500VA AC 1250VA AC

300W DC | 150W DC

1500VA AC | 600VA AC

90W DC

200VA AC

45W DC

180W DC

750VA AC

90W DC

Inductive

Load

Resistive

Load

Voltage

(V)

250 AC

30 DC

110 DC

250 AC

30 DC

110 DC

250 AC

30 DC

110 DC

Res.

10A

5A

10A

5A

0.6A

6A

ЗА

6A

3A

0.65A

0.33A

3A

ЗА

0.44A

Contact Ratings

Contact

DPDT

(RU2)

(RU42)

bifurcated

Continuous

Current

10A

Terminal Blocks
Relays & Sockets
Circuit
Protectors
Power Supplies
LED Illumination
Controllers
Operator
Interfaces
Sensors
AUTO-ID

l	Controllers
	Operator
	Interfaces
	Sensors
4PDT (RU4)	AUTO-ID
(1104)	
I APDT	

Sockets	
DIN Rail	
Producte	

• On 4PDT relays, the maximum allowable total current of neighboring two poles is 6A, At the rated load, make sure that the total current of neighboring two poles does not exceed 6A (3A + 3A = 6A).

UL and c-UL Ratings

ЗА

110	
RU	
RV8H	

30V DC						

\/altaga		Resistive		General Use Horse Power Rating				Rating	
Voltage	RU2	RU4	RU42	RU2	RU4	RU42	RU2	RU4	RU42
250V AC	10A	_	_	_	6A	3A	_	1/10HP	_
30V DC	10A	6A	3A	_	_	_	_	_	_

CSA Ratings

Voltage		Resistive							
voltage	RU2	RU4	RU42	RU2	RU4	RU42	RU2	RU4	RU42
250V AC	10A	_	_	_	6A	3A	_	1/10HP	_
30V DC	10A	6A	3 A	_	_	_		_	_

TÜV Ratings

Voltage		Resistive		Inductive			
voltage	RU2	RU4	RU42	RU42 RU2		RU42	
250V AC	10A	6A	3A	5A	0.8A	0.8A	
30V DC	10A	6A	ЗА	5A	1.5A	1.5A	

Surge Suppressor Ratings

_		_				
Ту	pe	Ratings				
AC Coil	With RC	RC series circuit R: 20 kΩ, C: 0.033 μF				
DC Coil	With Diode	Diode reverse voltage: 1000V Diode forward current: 1A				

Specifications

Model	RU2 (DPDT)	RU4 (4PDT)	RU42 (4PDT)		
Contact Material	Silver alloy	Silver (gold clad)	Silver-nickel (gold clad)		
Contact Resistance (*1)	50 mΩ maximum				
Minimum	24V DC, 5 mA	, , , , , , , , , , , , , , , , , , , ,			
Applicable Load (*2)	(reference value)				
Operate Time (*3)	20 ms maximum				
Release Time (*3)	20 ms maximum				
Power Consumption	AC: 1.1 to 1.4VA (5 DC: 0.9 to 1.0W	50 Hz), 0.9 to 1.2VA	(60 Hz)		
Insulation Resistance	100 MΩ minimum	(500V DC megger)			
	Between contact a	ind coil: 2500V AC,	1 minute		
	Between contacts of different poles:				
Dielectric Strength	2500V AC, 1 minute 2000V AC, 1 minute				
	Between contacts of the same pole: 1000V AC, 1 minute				
Operating Frequency	Electrical: 1800 operations/h maximum Mechanical: 18,000 operations/h maximum				
Vibration Resistance	Damage limits: 10 to 55 Hz, amplitude 0.5 mm Operating extremes: 10 to 55 Hz, amplitude 0.5 mm				
Shock Resistance	Damage limits: 1000 m/s ² Operating extremes: 150 m/s ²				
Mechanical Life	AC: 50,000,000 op DC: 100,000,000	50,000,000 operations			
Electrical Life	See H-019 and H-021.				
Operating	PCB terminal: -55 to +70°C (no freezing)				
Temperature (*4)	Others: -55 to +60°C (no freezing)				
Operating Humidity	5 to 85% RH (no condensation)				
Storage Temperature	, 3,				
Storage Humidity	5 to 85% RH (no condensation)				
Weight (Approx.)	35g				

Note: Above values are initial values.

- *1) Measured using 5V DC, 1A voltage drop method
- *2) Measured at operating frequency of 120 operations/min (failure rate level P, reference value)
- *3) Measured at the rated voltage (at 20°C), excluding contact bouncing; Release time of AC relays with RC: 25 ms maximum Release time of DC relays with diode: 40 ms maximum
- *4) Measured at the rated voltage.

APFM Switches &

Control Boxes

Emergency Stop Switches Enabling Switches

Safety Products

Explosion Proof

Terminal Blocks

LED Illumination Controllers Operator

Circuit Protectors Power Supplies

RU2 (DPDT Contact)

Dimensions Plug-in Terminal



RU2S

Latching

AC: Orange DC: Green

Marking Plate Removal Slot

Photo: RU2S-A100

Mechanical Indicator Window

(green)

LED Indicator

<u>ø1.2 × 2.2</u> Hole

Insert a flat screwdriver into the slot to remove the marking plate.

, Marking Plate (yellow)

35.0

Marking plate removal slot is provided only on one side.

0.5

dede de de

네맘네댕 네ઇ 네일

27.5

PCB Terminal



Mechanical Indicator Window (RU2S-C only)

35.0

0.5

d<u>=</u>d∞ d≥ d≥

네모네요 네용 네일

27.5

Marking Plate (yellow)

LED Indicator

(green) (RU2S-C only)

ø1.2 × 2.2 Hole

RU2S-C/RU2S-NF


Color Marking


AC: Yellow DC: Blue


Marking Plate Removal Slot


Photo: RU2V-NF-A100

RU2V

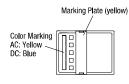

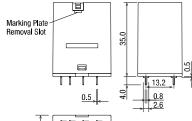

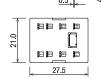

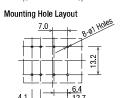

All dimensions in mm.

Sensors

AUTO-ID

Sockets

DIN Rail Products

RJ

RV8H

RL

Internal Connection (Bottom View)


RU2S-* Standard





24V DC or less

RU2S-*D With Diode

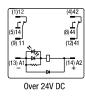



RU2S-*D1 With Diode **Reverse Polarity Coil**



RU2S-*R With RC



RU2S-NF-*/RU2V-NF-*



Blank or C comes in place of * to represent types with or without a latching lever.

APEM


Switches & Pilot Lights Control Boxes

Stop Switches Enabling Switches Safety Products


RU Series Universal Relays

Electrical Life Curves

RU2 (Resistive Load)

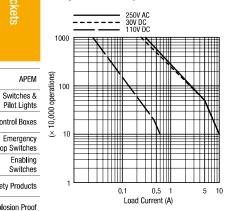

RU2 (Inductive Load)

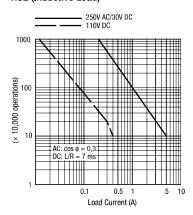

Terminal Blocks

Explosion Proof

Circuit Protectors Power Supplies

LED Illumination

Controllers Operator Sensors

AUTO-ID


Sockets

DIN Rail Products

RJ

Maximum Switching Current




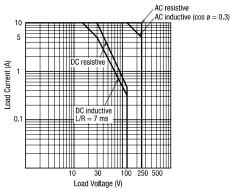


Ambient Temperature vs. Temperature Rise Curves

RU2 (AC Coil, 50 Hz)




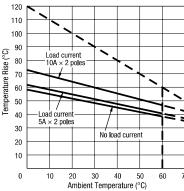

RU2 (AC Coil, 60 Hz)

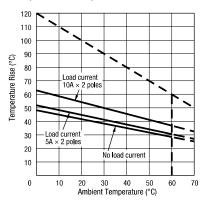

RU2 (DC Coil)

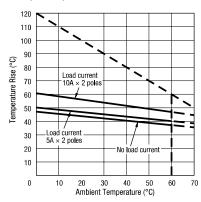

The above temperature rise curves show the characteristics when 100% the rated coil voltage is applied.

The heat resistance of the coil is 120°C. The slant dashed line indicates the allowable temperature rise for the coil at different ambient temperatures.

APFM Switches &

Control Boxes Emergency Stop Switches

Enabling Switches

Safety Products

Explosion Proof

Terminal Blocks

Circuit

Protectors Power Supplies

Controllers Operator

Sensors

AUTO-ID

LED Illumination

RU4 (4PDT Contact)

Dimensions Plug-in Terminal



RU4S/RU42S


Photo: RU42S-A100


PCB Terminal



Photo: RU4V-NF-D24

RU4V/RU42V

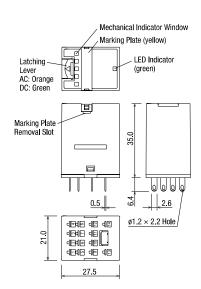


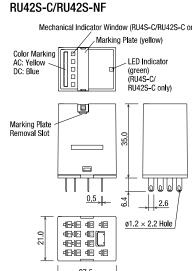

RU4S-C/RU4S-NF

Mechanical Indicator Window (RU4S-C/RU42S-C only) 27.5

Marking Plate (yellow) Color Marking AC: Yellow __ DC: Blue Marking Plate Removal Slot 35.0 Ţ 0.5 - 0 E

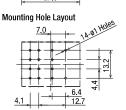

All dimensions in mm.

Sockets

DIN Bail Products

RJ

RV8H

RL

Internal Connection (Bottom View)

Marking plate removal slot is provided only on one side. Insert a flat screwdriver into the slot to remove the marking plate.

RU4S-*/RU42S-* Standard





RU4S-*D/RU42S-*D With Diode





RU4S-*D1/RU42S-*D1 With Diode Reverse Polarity Coil



RU4S-*R/RU42S-*R With RC



RU4S-NF-*/RU4V-NF-* RU42S-NF-*/RU42V-NF-*



Blank or C comes in place of * to represent types with or without a latching lever.

APEM Switches & Pilot Lights Control Boxes Emergency Stop Switches

Enabling

Switches

Safety Products

Explosion Proof

Terminal Blocks

Circuit


Protectors Power Supplies


> Sensors AUTO-ID

LED Illumination Controllers Operator Interfaces


Electrical Life Curves

RU4 (Resistive Load)

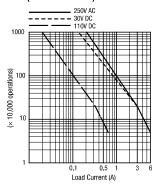

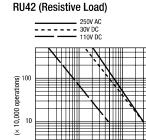


RU4 (Inductive Load)

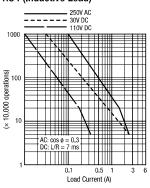

RU42 (Inductive Load)


0.02

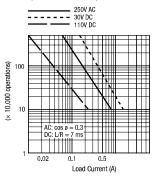


Load Current (A)

Maximum Switching Current


RU4 (Rated Load)

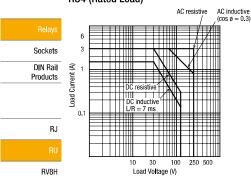



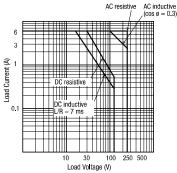



RU42

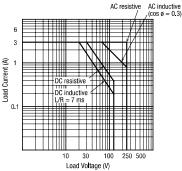


Ambient Temperature vs. Temperature Rise Curves


RU4/RU42 (AC Coil, 50 Hz)

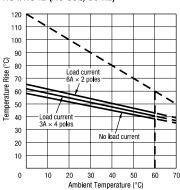

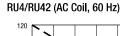

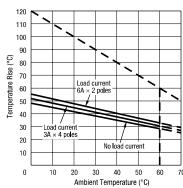

RU4/RU42 (DC Coil)

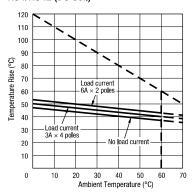

The above temperature rise curves show the characteristics when 100% the rated coil voltage is applied. Load current $6A \times 2$ poles is for the RU4 only.

The heat resistance of the coil is 120°C. The slant dashed line indicates the allowable temperature rise for the coil at different ambient temperatures.

Applicable Socket

Relay	Wiring Style	Shape	Part No.	Rated Current	Style	Applicate Hold-down Spring	le Spring Wire Spring	
			SM2S-05B	7A	Standard	SFA-202		
			SM2S-05C (*1)	7A (UL: 10A)	Finger-safe	SFA-101	_	APEM Switch
			SN2S-05D	10A	Standard			Pilot Li Contro Emerg
	Front Wiring Socket		SM2S-05DF (*1)	10A	Finger-safe	- SFA-503	_	Stop S Enablii Switch Safety
RU2			SU2S-11L	10A 8A (collective mounting) (*3)	Spring clamp (*2) ₹1. (*2)	SFA-202 SFA-101	_	Explos
			SU2S-21L	12A	Push-in (*5)	_	SU9Z-S21R	Relays Circuit Protect
			SM2S-51	10A	Solder St.	SFA-301 SFA-302	CVAC 5151	Power LED III
	Rear Wiring Socket		SM2S-61	10A	PC board		SY4S-51F1	Contro Operat Interfa
			SM2S-62	10A	PC board	SFA-504	SY4S-51F1	Sensor AUTO-
			SY4S-05B	7A	Standard	SFA-202		Dolove
			SY4S-05C (*1)	7A	Finger-safe	SFA-101	_	Socket DIN Ra
			SN4S-05D	6A	Standard Standard	SFA-502	_	Produc
	Front Wiring Socket		SY4S-05DF (*1)	6A	Finger-safe	SFA-502	_	RJ RU
RU4 RU42			SU4S-11L	6A (4-pole) 10A (2-pole) 8A (2-pole, collective mounting (*3)	Spring clamp (*2)	SFA-202 SFA-101	_	RV8H RL
		SU4S-21L 8A Push-in (*5) c		_	SU9Z-S21R			
			SY4S-51	7A	Solder SFA-301		SY4S-51F1	
	Rear Wiring Socket		SY4S-61	7A	PC board	SFA-302	3143-3111	
			SY4S-62	7A	PC board	SFA-504	SY4S-51F1	

^{*1)} Finger-safe cannot be used with ring terminal.

^{*2)} SU2S-11L and SU4S-11L are spring-clamp socket which does not require tightening screws. Stranded wire, solid wire, and ferrule can be attached using a screwdriver.
*3) When using SU2S-11L and SU4S-11L at rated current 8A and above, maintain at least 10mm distance from the adjacent SU socket.

^{*4)} Front wiring socket can be mounted directly on DIN rail and mounting panel (some sockets need spacers for the ends).

^{*5)} SU2S-21L and SU4S-21L are Push-in socket which does not require tightening screws. Stranded wire, solid wire, and ferrule can be attached using a screwdriver.

RU Series Universal Relays

Hold-down Springs

Sockets	Style	Shape	Material	Part No.	Ordering No.	Package Quantity
ets	Wire Spring			SY4S-51F1	SY4S-51F1PN10	10
Switches & Pilot Lights Control Boxes				SFA-101	SFA-101PN20	
Emergency Stop Switches Enabling Switches Safety Products				SFA-202	SFA-202PN20	
Explosion Proof Terminal Blocks Relays & Sockets	Leaf Spring		Stainless Steel	SFA-301	SFA-301PN20	10 pairs
Circuit Protectors Power Supplies LED Illumination				SFA-302	SFA-302PN20	
Controllers Operator Interfaces				SFA-502	SFA-502PN20	
Sensors AUTO-ID				SFA-503	SFA-503PN20	
Relays Sockets DIN Rail				SFA-504	SFA-504PN10	10

- A relay needs a pair of leaf springs, except for SFA-504 (one spring per relay).
 - $\bullet \ \ \text{When the wire spring SY4S-51F1 or leaf spring SFA-504 is used on a relay with latcing lever, lever cannot be opened or closed.}$
 - \bullet Leaf springs (except for the leaf spring SFA-504) cannot be removed after being installed on a socket.

RJ RU RV8H RL

APEM

Accessories for Sockets

Name		Shape	Specifications	Part No.	Ordering No.	Package Quantity	Remarks
DIN Rail			Aluminum Weight: Approx, 200g	BAA1000	BAA1000PN10	10	Length: 1m Width: 35 mm
		A Su	BNL5 Zinc-plated steel		BNL5PN10	10	Used on a DIN rail to fasten relay
End Clip			Weight: Approx. 15g	BNL6	BNL6PN10	10	sockets
DIN Rail Spacer			Plastic (black)	SA-406B	SA-406B	1	Thickness: 5 mm Used for adjusting spacing between sockets mounted on a DIN rail
- 10		周	- Plastic (black)	SA-203B	SA-203B	1	Used for mounting DIN rail mount
End Spacer		M	Trastic (black)	SA-204B	SA-204B	1	sockets directly on a panel surface
Jumper		Rated current: 3A (*1)	Brass jumper with ABS sheath Rated current: 3A Weight: Approx. 3g	SU9Z-J5	SU9Z-J5PN10	10	Used for interconnecting relay coil terminals on a maximum of five SU sockets; can be cut to required lengths
Lumanan	2	Rated current: 10A (*1)		SM9Z-JF2	SM9Z-JF2PN10		Used for interconnecting relay coil terminals on SM2S-05DF sockets;
Jumper (for 2-pole socket)	5	22		SM9Z-JF5	SM9Z-JF5PN10		can be cut to required length. No. of sockets:
Jounney	8	-777	Brass (Miskel plated)	SM9Z-JF8	SM9Z-JF8PN10	10	SM9Z-JF2: 2 SM9Z-JF5: 5 SM9Z-JF8: 8
lumnor	2	(Nickel-plated) with polyprene shea	with polyprene sheath	SY9Z-JF2	SY9Z-JF2PN10	10	Used for interconnecting relay coil terminals on SY4S-05DF sockets;
Jumper (for 4-pole socket)	5			SY9Z-JF5	SY9Z-JF5PN10		can be cut to required length SY9Z-JF2: 2 SY9Z-JF5: 5
ooonoty	8			SY9Z-JF8	SY9Z-JF8PN10		SY9Z-JF8: 8

^{*1)} Ensure that the total current to the jumper does not exceed the rated current,

Switches & Pilot Lights
Control Boxes
Emergency
Stop Switches
Enabling
Switches
Safety Products
Explosion Proof
Terminal Blocks
Relays & Sockets
Circuit
Protectors
Power Supplies
LED Illumination

Operator Interfaces Sensors AUTO-ID

elays

Sockets

DIN Rail Products

RJ

RU

RV8H

RL

APFM

Switches &

Pilot Lights

Emergency Stop Switches Enabling

Switches
Safety Products
Explosion Proof

Terminal Blocks

Circuit

Protectors

Power Supplies

LED Illumination

Controllers

Operator

Interfaces

Control Boxes

RU Series Universal Relays

Safety Precautions

- Turn off the power to the relay before starting installation, removal, wiring, maintenance, and inspection of the relays. Failure to turn power off may cause electrical shock or fire hazard.
- Observe specifications and rated values, otherwise electrical shock or fire hazard may be caused.
- Use wires of the proper size to meet the voltage and current requirements. Tighten the terminal screws on the relay socket to the proper tightening torque.
- Before operating the latching lever, turn off the power to the RU relay.
 After checking the circuit, return the latching lever to the original position.
- Do not use the latching lever as a switch.


- The durability of the latching lever is a minimum of 100 operations.
- When using DC loads on 4PDT relays, apply a positive voltage to terminals of neighboring poles and a negative voltage to the other terminals of neighboring poles to prevent the possibility of short circuits.
- . DC relays with a diode have a polarity in the coil terminals.
- The surge absorbing element on AC relays with RC or DC relays. with diode is provided to absorb the counter electromotive force generated by the coil. When the relay is subject to an excessive external surge voltage, the surge absorbing element may be damaged. Add another surge absorbing provision to the relay to prevent damage.

Instructions


Driving Circuit for Relays

- To make sure of correct relay operation, apply rated voltage to the relay coil.
- 2. Input voltage for the DC coil:

A complete DC voltage is best for the coil power to make sure of stable relay operation. When using a power supply containing a ripple voltage, suppress the ripple factor within 5%. When power is supplied through a rectification circuit, the relay operating characteristics, such as pickup voltage and dropout voltage, depend on the ripple factor. Connect a smoothing capacitor for better operating characteristics as shown below.

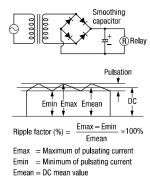


3. Operating the relay in synchronism with AC load: If the relay operates in synchronism with the AC power voltage of the load, the relay life may be reduced. If this is the case, select a relay in consideration of the required reliability for the load. Or, make the relay turn on and off irrespective of the AC power phase or near the point where the AC phase crosses zero voltage.

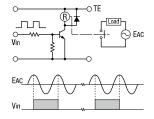


4. Leakage current while relay is off:

When driving an element at the same time as the relay operation, a special consideration is needed for the circuit design. As shown in the incorrect circuit below, Leakage current (Io) flows through the relay coil while the relay is off. Leakage current causes the coil release failure or adversely affects the vibration resistance and shock resistance. Design a circuit as shown in the correct example.

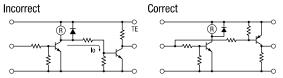

5. Surge suppression for transistor driving circuits: When the relay coil is turned off, a high-voltage pulse is generated, causing the transistor to deteriorate and sometimes to break. Be sure to connect a diode to suppress the counter electromotive force. Then, the coil release time becomes slightly longer. To shorten the coil release time, connect a Zener diode between the collector and emitter of the transistor. Select a Zener diode with a Zener voltage slightly higher than the power voltage.

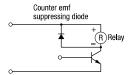

Sensors AUTO-ID

Relays Sockets

DIN Rail Products

Products

RU

RJ


RV8H

Instructions


Protection for Relay Contacts

- The contact ratings show maximum values. Make sure that these values are not exceeded. When an inrush current flows through the load, the contact may become welded. If this is the case, connect a contact protection circuit, such as a current limiting resistor.
- 2. Contact protection circuit:

When switching an inductive load, arcing causes carbides to form on the contacts, resulting in an increased contact resistance. In consideration of contact reliability, contact life, and noise suppression, use of a surge absorbing circuit is recommended. Note that the release time of the load becomes slightly longer. Check the operation using the actual load. Incorrect use of a contact protection circuit will adversely affect switching characteristics. Four typical examples of contact protection circuits are shown in the following table:

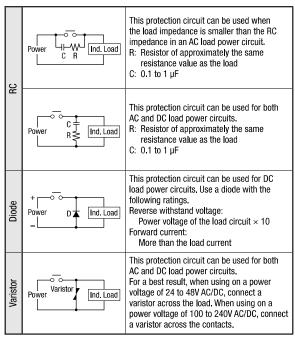

3. Do not use a contact protection circuit as shown below:

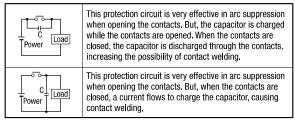

Generally, switching a DC inductive load is more difficult than switching a DC resistive load. Using an appropriate arc suppressor, however, will improve the switching characteristics of a DC inductive load.

Other Precautions

1. General notice:

To maintain the initial characteristics, do not drop the relay or shock the relay.

The relay cover cannot be removed from the base during normal operation. To maintain the initial characteristics, do not remove the relay cover.

Use the relay in environments free from condensation of dust, sulfur dioxide (SO_2), and hydrogen sulfide (H_2S).

Make sure that the coil voltage does not exceed the applicable coil voltage range.

2. Connecting outputs to electronic circuits:

When the output is connected to a load which responds very quickly, such as an electronic circuit, contact bouncing causes incorrect operation of the load. Take the following measures into consideration.

Connect an integral circuit.

Suppress the pulse voltage due to bouncing within the noise margin of the load.

- UL- and CSA-approved ratings may differ from product rated values determined by IDEC.
- Do not use relays in the vicinity of strong magnetic field as this may affect relay operation.

DC diode type has polarity.

The surge absorbing element on AC relays with RC or DC relays with diode is provided to absorb the counter electromotive force generated by the coil. When the relay is subject to an excessive external surge voltage, the surge absorbing element may be damaged. Add another surge absorbing provision to the relay to prevent damage.

APEM

Switches &

Control Boxes

Emergency Stop Switches Enabling Switches

Safety Products

Explosion Proof

Terminal Blocks

Relays & Sockets

Circuit Protectors

Power Supplies

LED Illumination

Controllers

Operator Interfaces

Sensors

AUTO-ID

Relays

Sockets

DIN Rail Products

RJ

RU

RV8H

RL

Ordering Terms and Conditions

Thank you for using IDEC Products.

By purchasing products listed in our catalogs, datasheets, and the like (hereinafter referred to as "Catalogs") you agree to be bound by these terms and conditions. Please read and agree to the terms and conditions before placing your order.

1. Notes on contents of Catalogs

- (1) Rated values, performance values, and specification values of IDEC products listed in this Catalog are values acquired under respective conditions in independent testing, and do not guarantee values gained in combined conditions.
 - Also, durability varies depending on the usage environment and usage conditions.
- (2) Reference data and reference values listed in Catalogs are for reference purposes only, and do not guarantee that the product will always operate appropriately in that range.
- (3) The specifications / appearance and accessories of IDEC products listed in Catalogs are subject to change or termination of sales without notice, for improvement or other reasons.
- (4) The content of Catalogs is subject to change without notice.

2. Note on applications

- (1) If using IDEC products in combination with other products, confirm the applicable laws / regulations and standards.
 - Also, confirm that IDEC products are compatible with your systems, machines, devices, and the like by using under the actual conditions. IDEC shall bear no liability whatsoever regarding the compatibility with IDEC products.
- (2) The usage examples and application examples listed in Catalogs are for reference purposes only. Therefore, when introducing a product, confirm the performance and safety of the instruments, devices, and the like before use. Furthermore, regarding these examples, IDEC does not grant license to use IDEC products to you, and IDEC offers no warranties regarding the ownership of intellectual property rights or non-infringement upon the intellectual property rights of third parties.
- (3) When using IDEC products, be cautious when implementing the following.
 - i. Use of IDEC products with sufficient allowance for rating and performance
 - Safety design, including redundant design and malfunction prevention design that prevents other danger and damage even in the event that an IDEC product fails
 - iii. Wiring and installation that ensures the IDEC product used in your system, machine, device, or the like can perform and function according to its specifications
- (4) Continuing to use an IDEC product even after the performance has deteriorated can result in abnormal heat, smoke, fires, and the like due to insulation deterioration or the like. Perform periodic maintenance for IDEC products and the systems, machines, devices, and the like in which they are used.
- (5) IDEC products are developed and manufactured as general-purpose products for general industrial products. They are not intended for use in the following applications, and in the event that you use an IDEC product for these applications, unless otherwise agreed upon between you and IDEC, IDEC shall provide no guarantees whatsoever regarding IDEC products.
 - i. Use in applications that require a high degree of safety, including nuclear power control equipment, transportation equipment (railroads / airplanes / ships / vehicles / vehicle instruments, etc.), equipment for use in outer space, elevating equipment, medical instruments, safety devices, or any other equipment, instruments, or the like that could endanger life or human health
 - Use in applications that require a high degree of reliability, such as provision systems for gas / waterworks / electricity, etc., systems that operate continuously for 24 hours, and settlement systems
 - iii. Use in applications where the product may be handled or used deviating from the specifications or conditions / environment listed in the Catalogs, such as equipment used outdoors or applications in environments subject to chemical pollution or electromagnetic interference If you would like to use IDEC products in the above applications, be sure to consult with an IDEC sales representative.

3. Inspections

We ask that you implement inspections for IDEC products you purchase without delay, as well as thoroughly keep in mind management/maintenance regarding handling of the product before and during the inspection.

4. Warranty

(1) Warranty period

The warranty period for IDEC products shall be one (1) year after purchase or delivery to the specified location. However, this shall not apply in cases where there is a different specification in the Catalogs or there is another agreement in place between you and IDEC.

(2) Warranty scope

Should a failure occur in an IDEC product during the above warranty period for reasons attributable to IDEC, then IDEC shall replace or repair that product, free of charge, at the purchase location / delivery location of the product, or an IDEC service base. However, failures caused by the following reasons shall be deemed outside the scope of this warranty.

- i. The product was handled or used deviating from the conditions / environment listed in the Catalogs
- ii. The failure was caused by reasons other than an IDEC product
- iii. Modification or repair was performed by a party other than IDEC
- iv. The failure was caused by a software program of a party other than $\ensuremath{\mathsf{IDEC}}$
- v. The product was used outside of its original purpose
- Replacement of maintenance parts, installation of accessories, or the like was not performed properly in accordance with the user's manual and Catalogs
- vii. The failure could not have been predicted with the scientific and technical standards at the time when the product was shipped from IDEC
- viii. The failure was due to other causes not attributable to IDEC (including cases of force majeure such as natural disasters and other disasters)
 Furthermore, the warranty described here refers to a warranty on the IDEC product as a unit, and damages induced by the failure of an IDEC product are excluded from this warranty.

5. Limitation of liability

The warranty listed in this Agreement is the full and complete warranty for IDEC products, and IDEC shall bear no liability whatsoever regarding special damages, indirect damages, incidental damages, or passive damages that occurred due to an IDEC product.

6. Service scope

The prices of IDEC products do not include the cost of services, such as dispatching technicians. Therefore, separate fees are required in the following cases.

- (1) Instructions for installation / adjustment and accompaniment at test operation (including creating application software and testing operation, etc.)
- (2) Maintenance inspections, adjustments, and repairs
- (3) Technical instructions and technical training
- (4) Product tests or inspections specified by you

The above content assumes transactions and usage within your region. Please consult with an IDEC sales representative regarding transactions and usage outside of your region. Also, IDEC provides no guarantees whatsoever regarding IDEC products sold outside your region.

IDEC CORPORATION

Head Office 6-64, Nishi-Miyahara-2-Chome, Yodogawa-ku, Osaka 532-0004, Japan

www.idec.com

USA IDEC Corporation EMEA APEM SAS Singapore Thailand India

IDEC Izumi Asia Pte. Ltd. IDEC Asia (Thailand) Co., Ltd. IDEC Controls India Private Ltd.

China IDEC (Shanghai) Corporation IDEC Izumi (H.K.) Co., Ltd.

Taiwan IDEC Taiwan Corporation

Japan IDEC Corporation

